

LEVEL

STEEL WATCHES

MANUAL DE INSTRUCCIONES / USER'S GUIDE


VX9J

AJUSTAR LA HORA

- Saque la corona hasta la posición del primer clic cuando la aguja de los segundos está en la posición de las 12 en punto.
- Gire la corona para ajustar la hora teniendo en cuenta AM/PM.
- Presione la corona hasta la posición normal.

Técnica avanzada de ajuste:

- La aguja de las 24 horas se mueve a la vez que la aguja horaria.
- Cuando ajuste la aguja horaria, compruebe que la aguja de las 24 horas se ha ajustado correctamente.
- Cuando ajuste el minuterio, aváncelo de 4 a 5 minutos respecto a la hora deseada y después ajústelo al tiempo exacto.

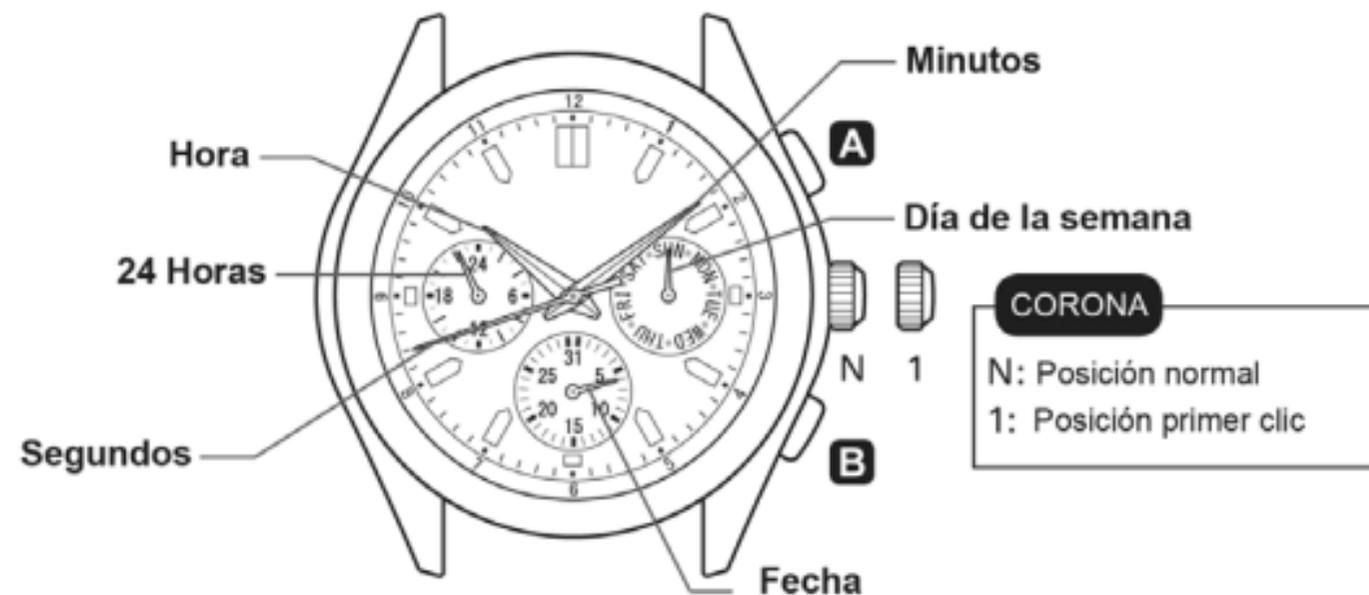

AJUSTAR LA FECHA Y EL DÍA DE LA SEMANA

Corrección del día:

Cada vez que se presiona el botón A, la aguja del día de la semana avanza un día.

Cada vez que se presiona el botón B, la aguja de la fecha avanza un día.

NOTA:

- No ajuste la fecha o el día de la semana entre las 21:00 y las 04:00 ya que puede que no cambien correctamente.
- Cuando ajuste las agujas de la fecha y el día de la semana, compruebe que se mueven correctamente en incrementos de un día.
- Es necesario ajustar la fecha en el primer día después de un mes de 30 días y de febrero.

SETTING THE TIME


Pull out the crown to the 1st click position when the second hand is at the 12 o'clock position.

Turn to set the time taking AM/PM into consideration.

Push the crown back to the normal position.

Advance Setting Technique:

- The 24-hour hand moves correspondingly with the hour hand.
- When setting the hour hand, check that the 24-hour hand is correctly set.
- When setting the minute hand, advance it 4 to 5 minutes ahead of the desired time and then turn it back to the exact time.

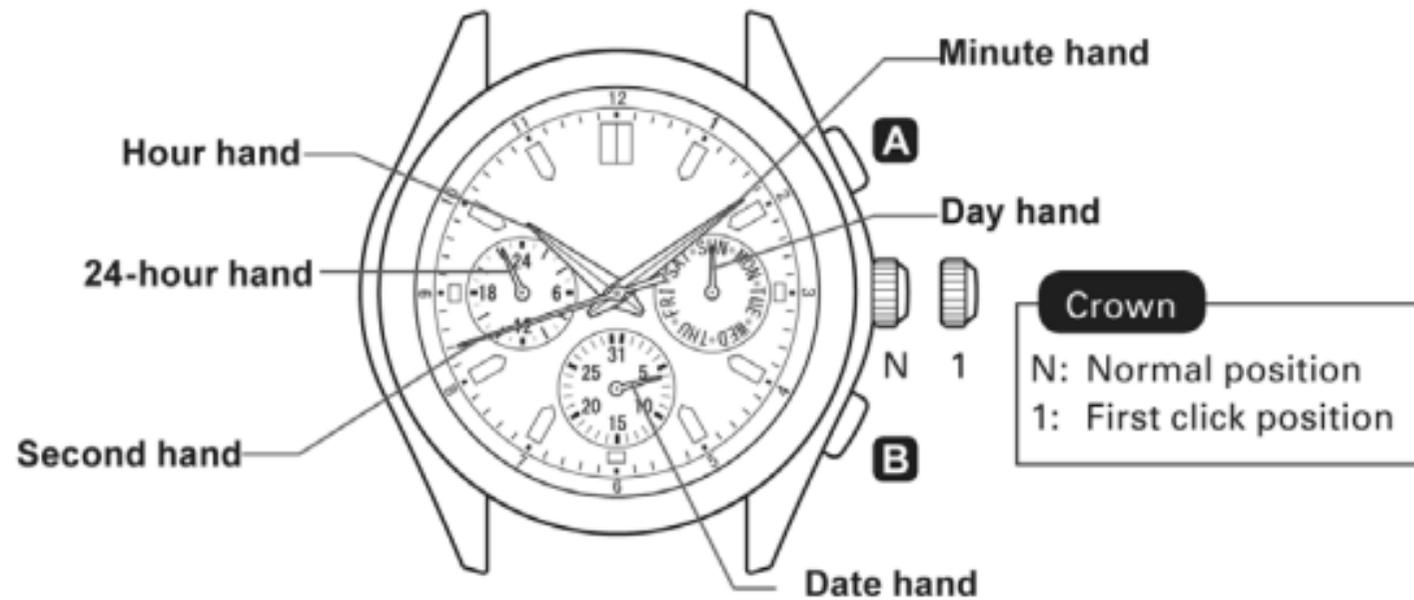

SETTING THE DATE AND DAY OF THE WEEK

Day Correction:

With each pressing of the button A, the day hand advances to the next day.

With each pressing of the button B, the date hand advances one day.

NOTE:

- Do not set the date and the day hands between 9:00 p.m. and 4:00 a.m. otherwise, they may not move properly.
- While setting the date and the day hands, check that they move properly in one-day increments.
- It is necessary to adjust the date on the first day after a 30-day month and February.

LEVEL

STEEL WATCHES

www.levelwatches.es